

FIG. 1

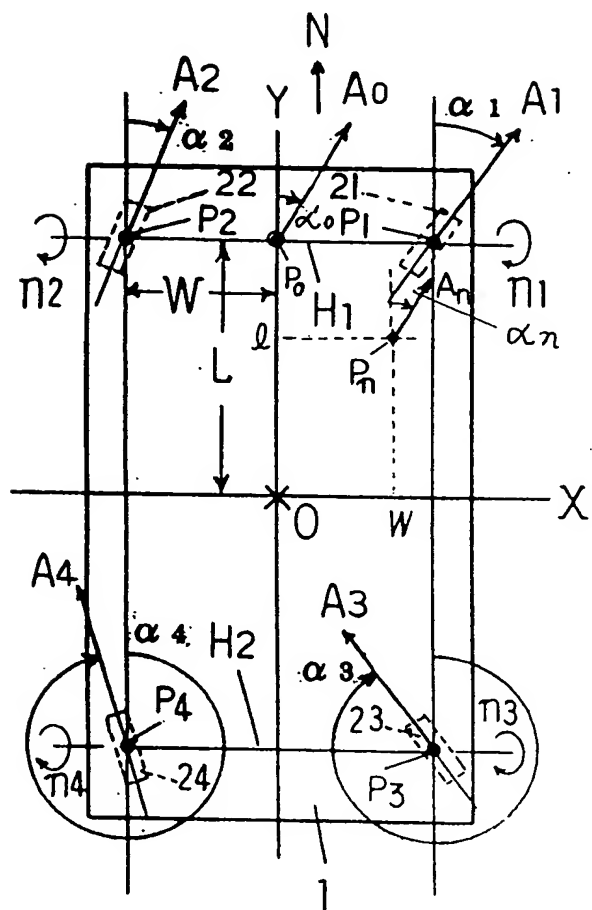


FIG. 2

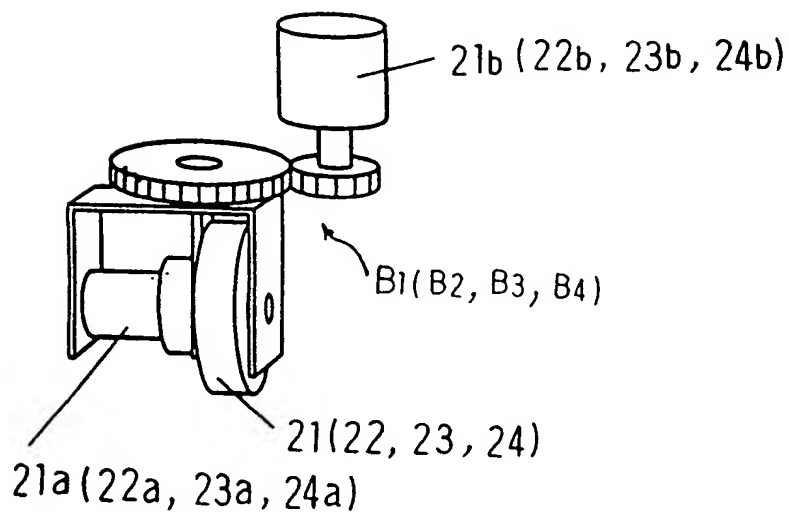


FIG. 3

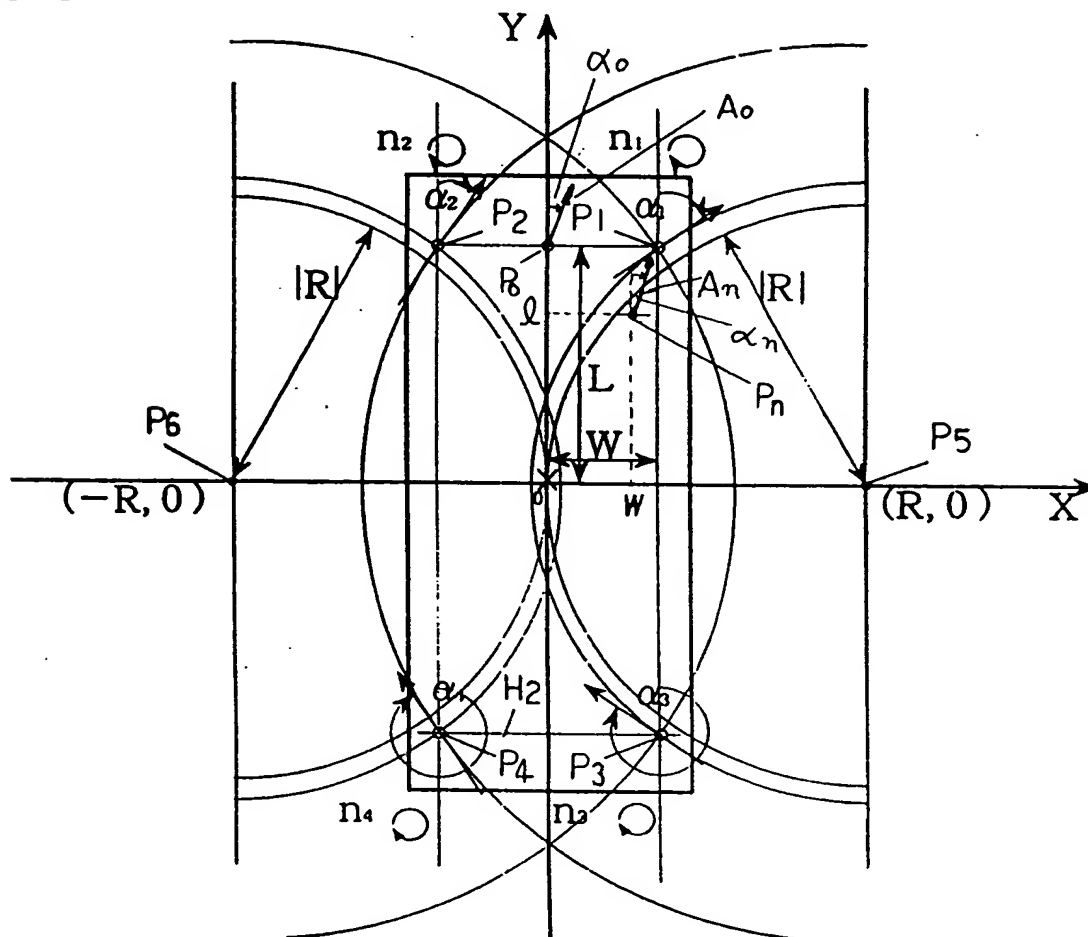


FIG. 4

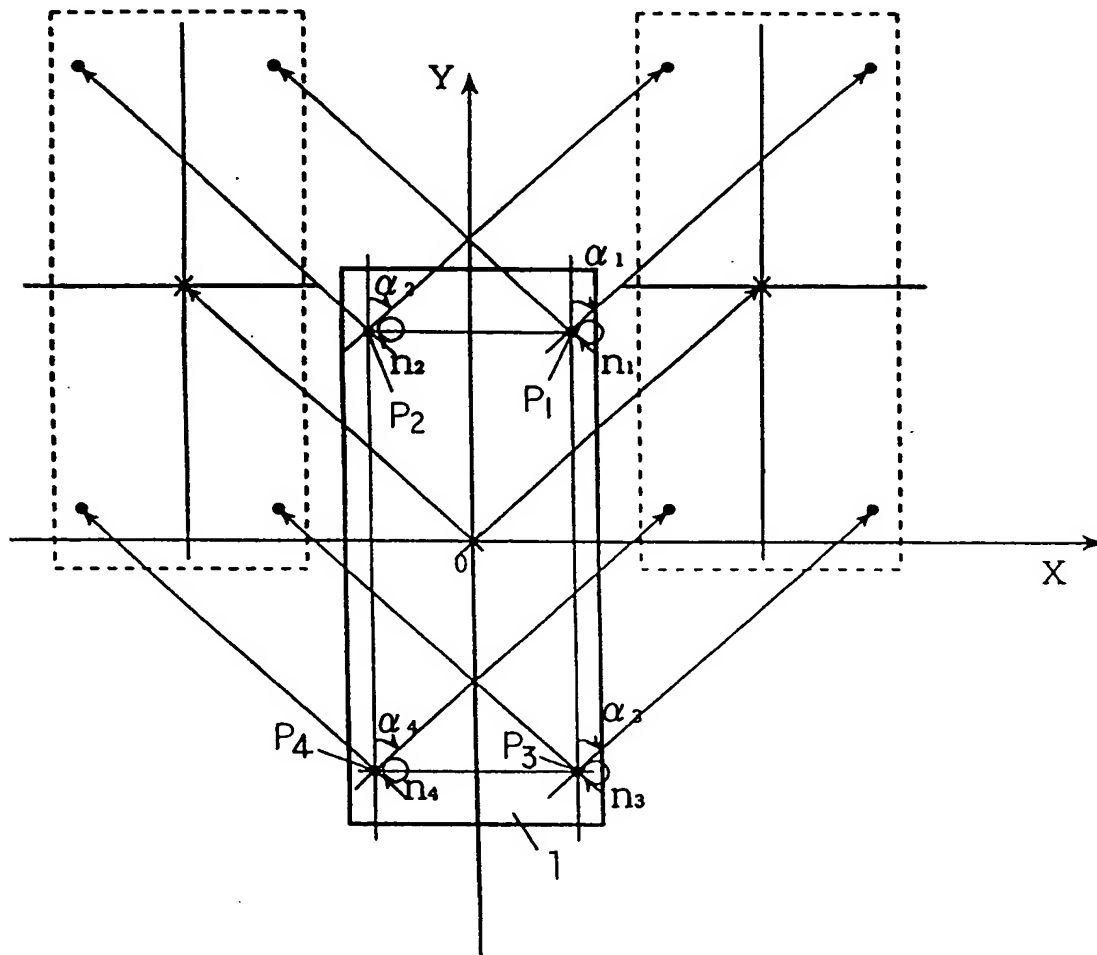


FIG. 5

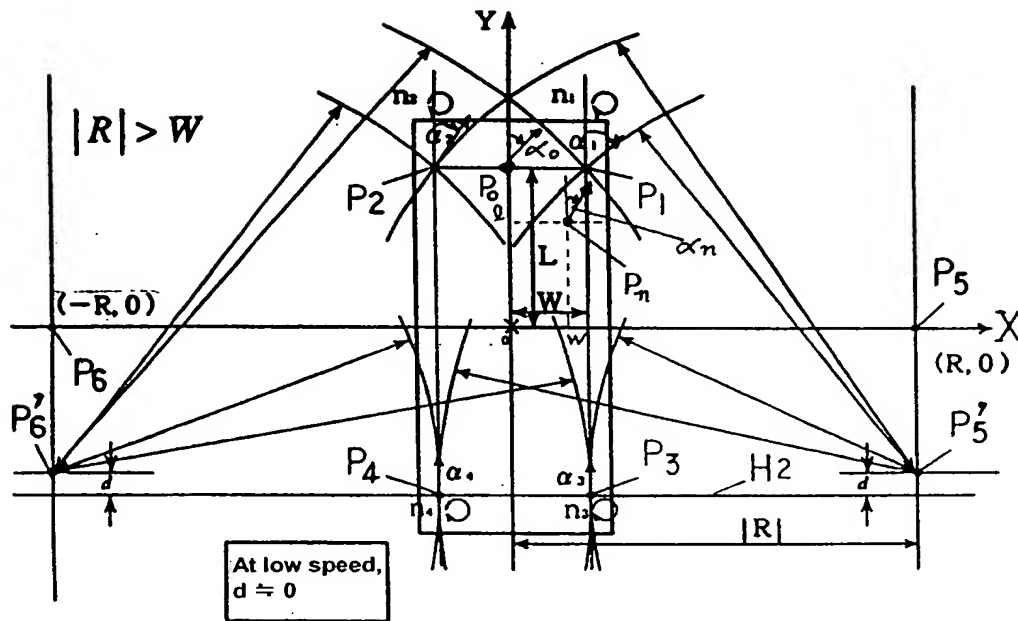


FIG. 6


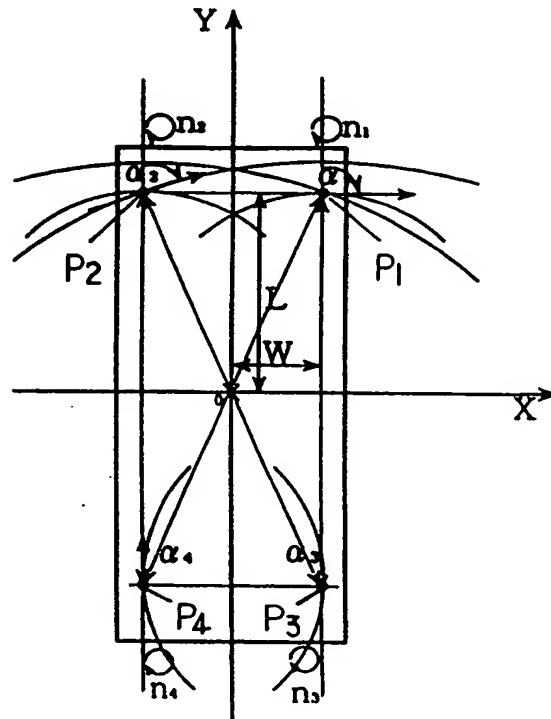


FIG. 7

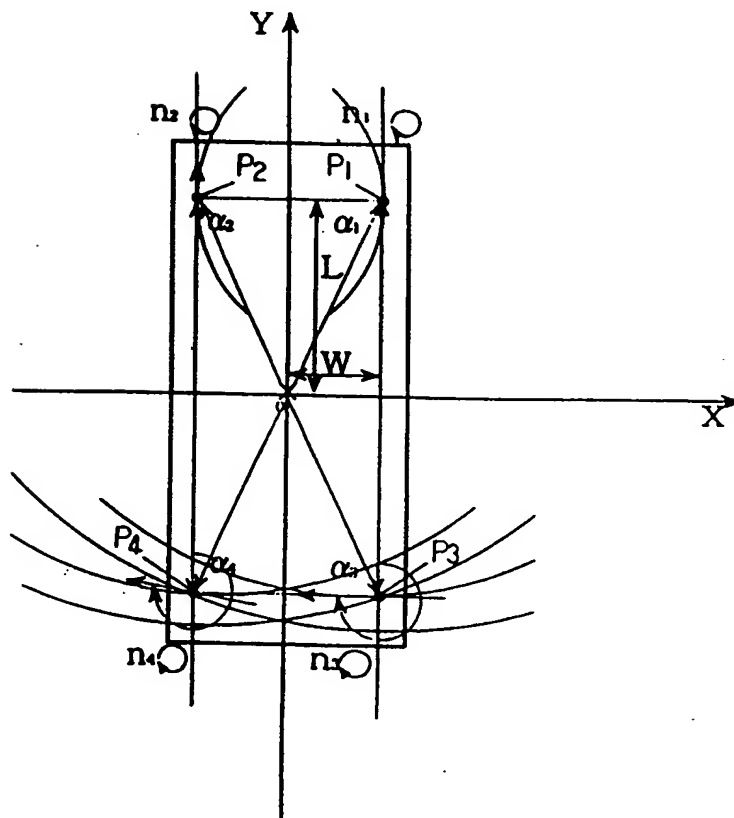

6/9

FIG. 8

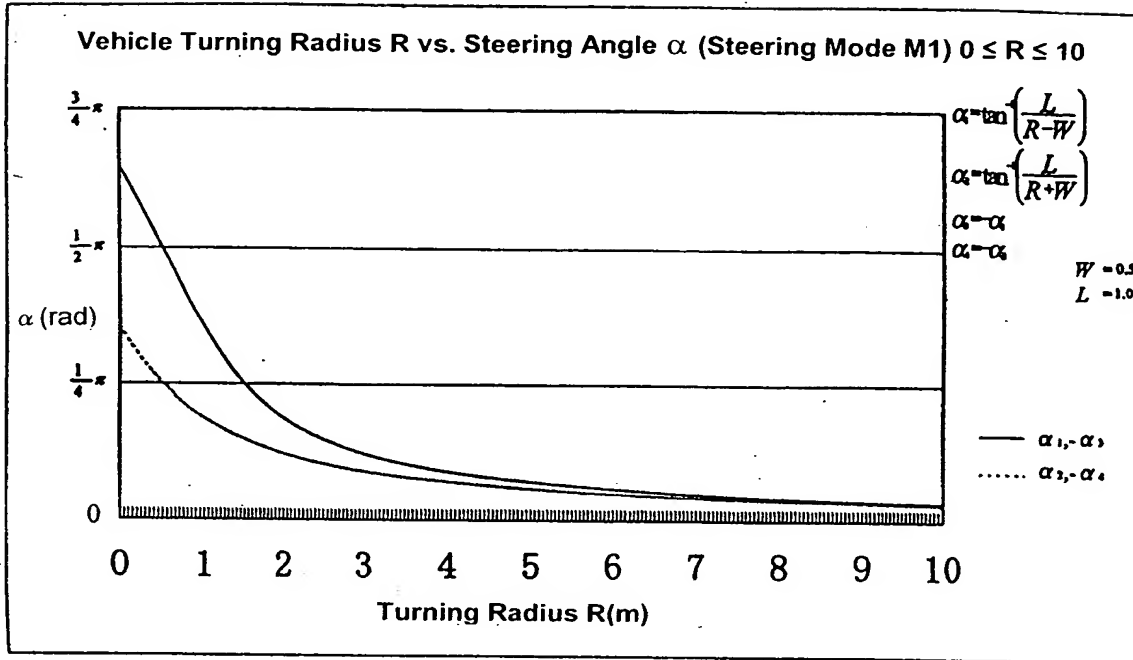


FIG. 9

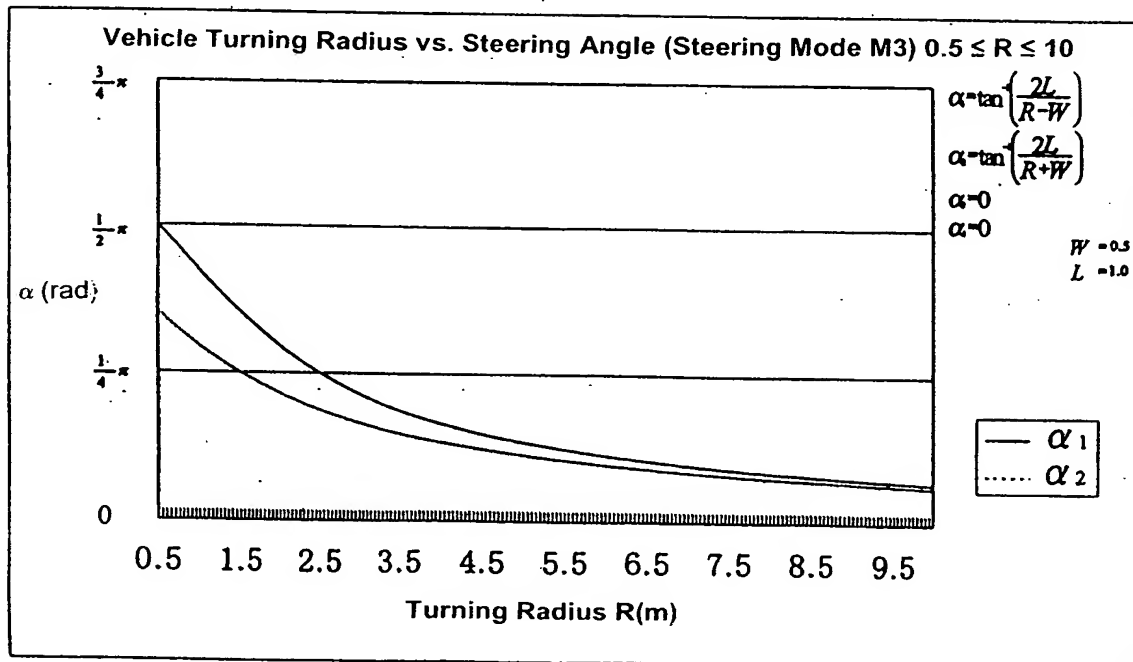


FIG. 10

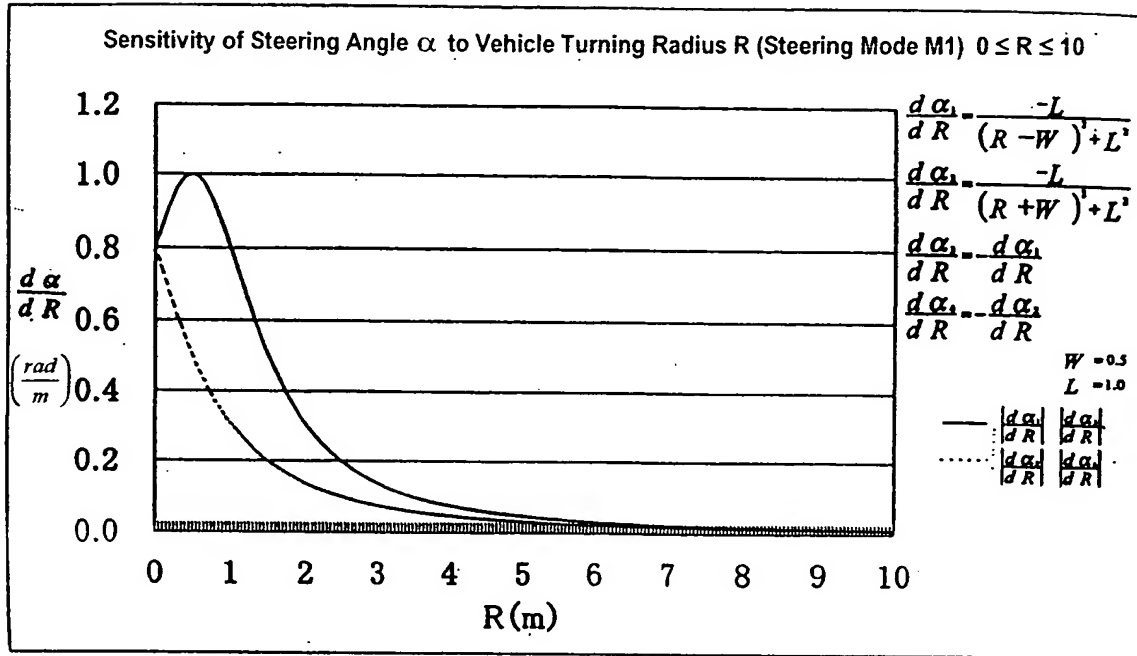


FIG. 11

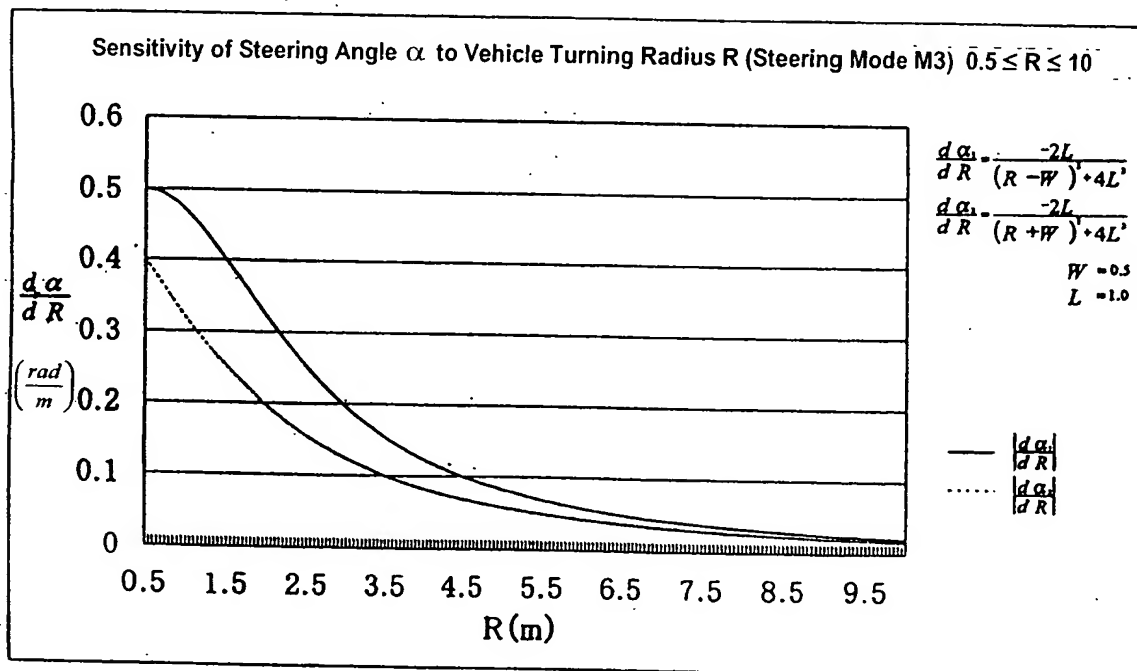


FIG. 12



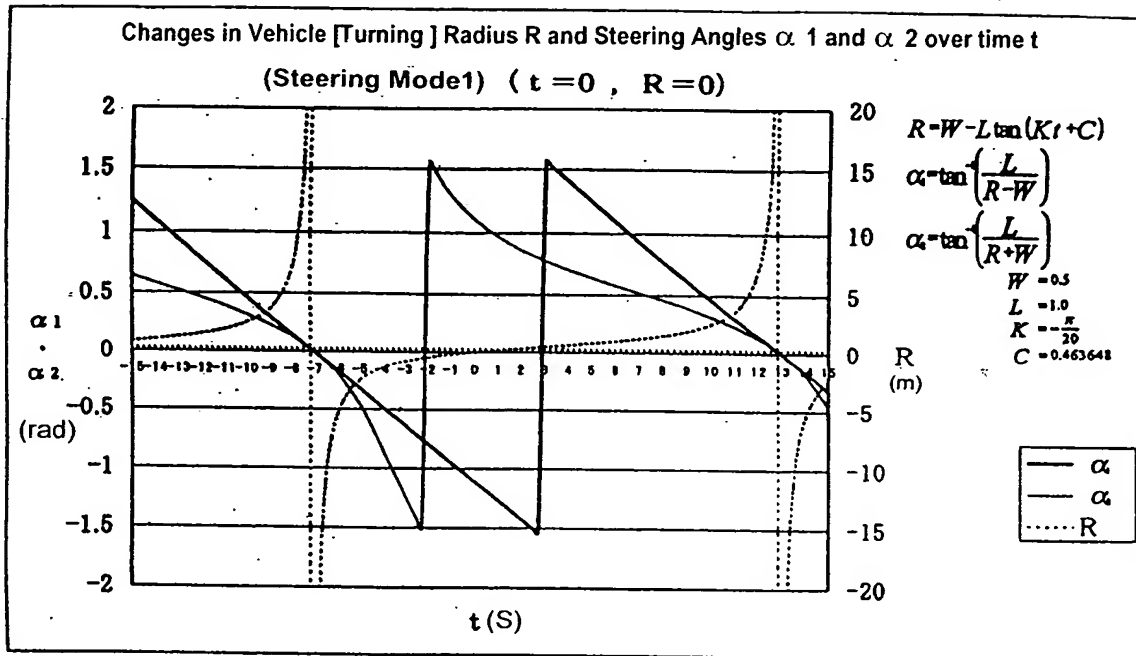


FIG. 13

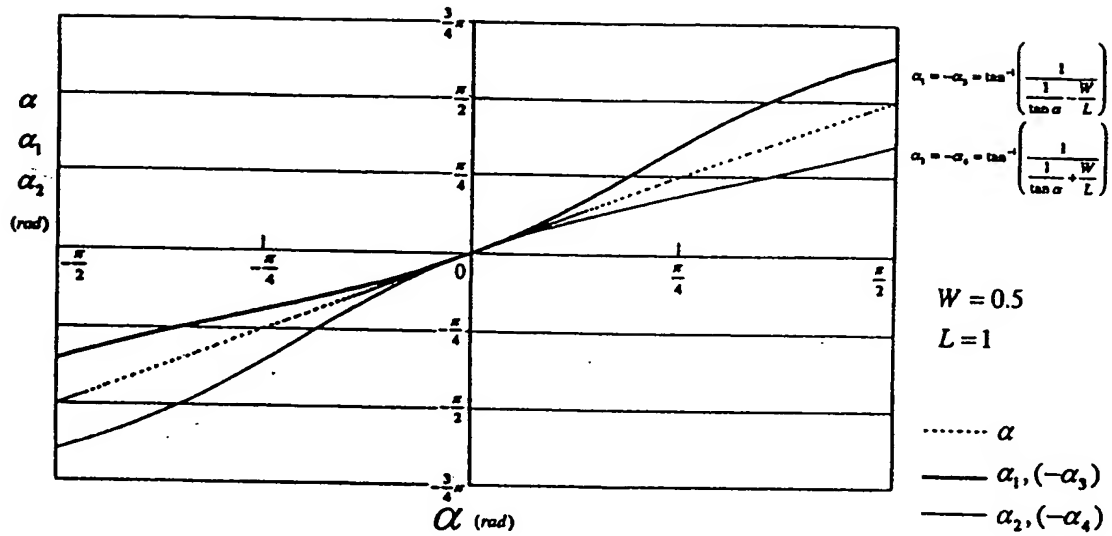

Steering Angles α_1 Through α_4 When α_0 is Used as the Steering Command Value (Steering Mode M1)

FIG. 14

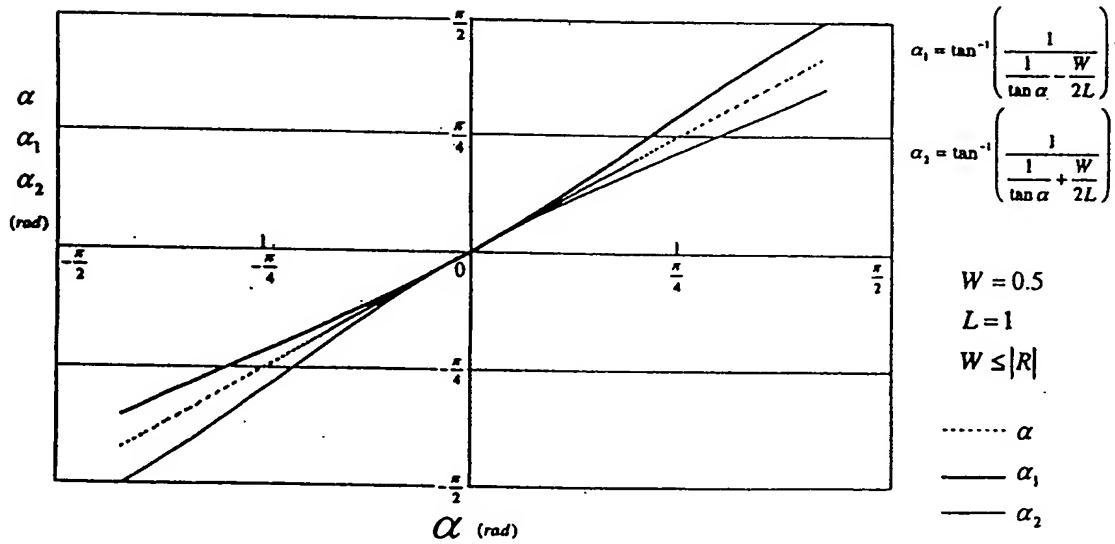

Steering Angles α_1 and α_2 When α_0 is Used as the Steering Command Value (Steering Mode M3)